


## **Important Information**

- Please retain these instructions for future reference.
- Do not allow your Chatter-Block to come into contact with water or other liquids.
- In the event of an electro-static discharge, your Chatter-Block may malfunction. In this case, please switch it off and then back on again to reset it.

## Know your Chatter-Block

The Chatter-Block is extremely robust, but like all electronic devices, can be damaged if abused. The Chatter-Block is designed to be rolled, or tumbled, like a dice, not thrown or dropped.

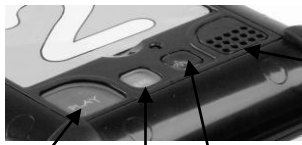

**Play**

**Record**

**On/off**

**Microphone**


## Recording

Press and hold the Red Record button together with the Green Play button on the particular face you wish to record and speak clearly into the microphone. Release the record button to finish recording. Press the green play button to hear your recording. You can re-record at any time by repeating this procedure.

## Playing

You can play the recording back at any time by pressing the Green play button on any face, but the Chatter-Block is intended to be rolled just like a dice. When the Chatter-Block comes to rest, the sound that is associated with the upper-most face will play. The removable plastic covers allow pictures and drawings to be fixed to every face.

## Changing the batteries

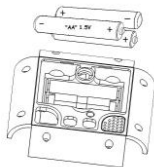

The Chatter Block takes 3 x AA Batteries. The battery compartment is located on the face with the power and record buttons. Using a small coin, open the battery hatch. Carefully remove the plastic cover to access the battery compartment.

Non-rechargeable batteries are not to be recharged. Different types of batteries, or new and used batteries are not to be mixed.

Batteries are to be inserted with the correct polarity.

Exhausted batteries are to be removed from the Chatter-Block.

The supply terminals are not to be short-circuit.

## Troubleshooting

Chatter-Block is designed to work reliably and predictably in all normal conditions. However, it is possible that problems may occur. Please check the following before contacting technical support:

<b>Problem</b>	<b>Will not turn on</b>
Solution	Battery is very low, replace batteries
<b>Problem</b>	<b>Recorded sound is too quiet</b>
Solution	Remember to speak into the microphone which is located next to the power switch

## Specification

Record Length	10 Seconds on each face
Auto Power Off	5 Minutes
Weight	400 g
Size	11cm x 11cm x 11cm
Battery life approximately	1000 operations

## Support & Warranty

This product is provided with a one-year warranty for problems found during normal usage. Mistreating the Chatter-Block™ or opening the unit will invalidate this warranty. All out of warranty repairs will be subject to a replacement fee.

Please visit [www.tts-group.co.uk](http://www.tts-group.co.uk) for latest product information.

Email [feedback@tts-group.co.uk](mailto:feedback@tts-group.co.uk) for technical support.

TTS Group Ltd  
Park Lane Business Park  
Kirkby-in-Ashfield  
Nottinghamshire, UK  
NG17 9GU

Freephone: 0800 318686  
Freefax: 0800 137525

Made in China

Product Code: EL00068 TTS Chatter-Block



WARNING! Not suitable for children under 36 months due to small parts – choking hazard.

WARNING: Do not dispose of this product in household waste. Hand it over to a collection point for recycling electronic appliances.